

Wireless Headsets General use

Power ON and Volume adjust

Right Earcup



Volume UP



Press and Hold (2 sec.) You will hear "Power On" and the battery status "Battery High (medium,Low)" and when already paired with the SCC you will hear "Your device is connected"



Volume DOWN

 On the Right earcup backside a blue LED flashes when ON

Left Earcup
Top


Volume Reduce. By Pressing you toggle between normal Volume and reduced Volume.
The last settings are stored in the memory at switch OFF

Push To Talk

Left Earcup



The Left Earcup has a PTT button, press and Hold to speak. Only needed in All HD comms mode settings

The SCC has 3 Comms Modes:

All HD : All Half Duplex. This means that Tender and Wireless / Wired Headsets will always hear the diver and Tender and headset need to press PTT button to speak to divers and Tenders (wired and wireless)

Tender HD/wHS FD: Tender half duplex and Wireless headsets Full duplex. This means that only the Tender needs to press PTT to speak with the divers. The Wireless Headsets can speak and listen to the diver without pressing The PTT button.

All FD: All Full duplex. This means all Tender, Wired and wireless Headsets can speak with each other without pressing any PTT button.

Power OFF

Right Earcup



Press and Hold (2 sec.) You will hear "Power Off"

Microphone Mute

Right Earcup



Press both the volume up and volume down button to mute the microphone. Do the same to unmute it again.

Pairing Wireless Headsets

Pairing Headset

When connection between the headset and the SCC is lost, the headset needs to be paired with the SCC:

- Make sure that the Headset is switched OFF

Right Earcup




Press and Hold until you hear "Two" and release the button



On The SCC panel at the Headset 1 or 2 buttons:
Press and Hold for 4 seconds and release

After a few seconds you will hear "Your device is connected" and the button flashes Blue

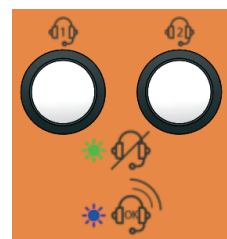

The Push buttons on the SCC indicate the connection status of the Wireless



Flashing Green: Not connected
Headset can be OFF or not connected



Flashing Blue: connected

Charging Wireless Headset

The wireless headset is supplied with a special USB charging cable.

Connect the USB end to the DVR USB of the SCC. And connect the round magnetic connector to the bottom of the right earcup.

When correct connected you will hear "Charging" and the status LED on the right earcup will flash RED.

Battery status:

Voice prompt: "Battery High" Battery charged for 80-100%

Voice prompt: "Battery Medium" Battery charged for 20-80%

Voice prompt: "Battery Low" Battery charged for 10-20% and status LED flashing RED

When battery level is below 10% the headset will auto switch off and needs to be charged.